



TS.ENG.002.UK Transfer Oil QUADRA Assembling Instructions

GOMAX® QUADRA DN2 - DN4 - DN6

Contents

1.	Author	2
2.	Scope	2
3.	References	2
4.	Crimping machine	2
4.1.	Crimping machine selection	2
4.2.	Selection of the dies:	3
5.	Preparing the assembly	4
6.	Assembling the ferrule and the insert	4
7.	Crimping of the ferrules	5
7.1.	Setting the crimping machine:	5
7.2.	Crimping:	5
7.3.	Verify the assembly	6

WARNING!

NON-COMPLIANCE WITH THE FOLLOWING INSTRUCTIONS WILL LEAD TO THE PREMATURE FAILURE OF THE HOSE ASSEMBLY AND THE LOSS OF WARRANTY.

The information contained in this document is the sole property of Transfer Oil S.p.A. Any disclosure, copying or reproduction in part or as a whole of the information without the written permission of Transfer Oil S.p.A. is prohibited.

Extra care is taken in the preparation of this data sheet but Transfer Oil is not responsible for any inadvertent typographical errors or omissions. Information subject to change without notice. The information in these instructions are only accurate as of the date of publication.

File name: TS.ENG.002.UK Transfer Oil QUADRA Assembling Instructions.docx Document Ref: MDTECH001





1. Author

Dario Martinelli, Technical Manager

2. Scope

The goal of this technical specification is to provide support for those customers who need an heavy-duty crimping machine, besides our customized tools RXA007, RXA005, RXA011, RXA012, in order to train their operators in assembling QUADRA DN2, DN4, DN6 hoses.

It is essential to complete the training process on the following procedures in order to make high quality Transfer Oil – GOMAX QUADRA DN2, DN4 and DN6 hose assemblies.

Transfer Oil – GOMAX QUADRA hose assemblies are designed and manufactured to be installed in air conditioning & refrigeration applications.

Only the use of genuine Transfer Oil – GOMAX QUADRA hoses, fittings, recommended tooling and full compliance with the following Transfer Oil – GOMAX QUADRA assembly instructions can guarantee safety and conformity with standards.

3. References

- Previous Operating Manual document: MDTECH001, release 1.0 19/07/16.
- R&D and QA tests.

4. Crimping machine

4.1. Crimping machine selection

The crimping machine is the most important machine you will need when assembling GOMAX QUADRA hoses DN2, DN4, DN6. For this reason, it is very important that the selection of this equipment is made carefully, considering every characteristic of the parts that will be assembled and the performance of the finished product.

For the assembling of the GOMAX QUADRA hoses DN2, DN4, DN6 with the GOMAX Quadra fitting and ferrules there are many different hydraulic crimping machines available on the market. Some manufacturers and models of suitable hydraulic crimping machines are listed below.

- UNIFLEX HYDRAULIC GmbH, model HM200;
- FINN POWER, model P20;
- O+P S.r.l, model TUBOMATIC H47/E EL.

This is just a short list of the suitable crimping machines that can be found on the market.

The two main characteristics that are fundamental to obtain a perfect crimping result on GOMAX QUADRA assemblies are:

- the selected crimping machine SHOULD have 8 crimping dies;
- the selected crimping machine SHOULD have a control for the position of the dies: this control can be digital with a display for the crimping data or a simpler electromechanical vernier dial for setting the final position of the dies during the crimping stroke.



ANSFER OIL

Pure Fluid Attitude

Digital Control



GOMAX

Electromechanical control with vernier dial

4.2. Selection of the dies:

The selected crimping machine should be equipped with 3 set of dies:

- Ø 6,8 mm for GOMAX QUADRA DN2;
- Ø 9,0 mm for GOMAX QUADRA DN4;
- Ø 12,0 mm for GOMAX QUADRA DN6.

In order to obtain a correct final crimping diameter, which is fundamental to ensure the performance of the assembled hose, the correct die set ought to be installed on the crimping machine which should be set to achieve the final diameter of the crimped ferrule as listed in the table below (Table 1).

HOSE	DIES SET Diameter (mm)	CRIMPING Diameter (mm)
DN2	6,8	7,0 +0,1/-0,2 mm
DN4	9,0	9,8 +0,2/-0,1 mm
DN6	12,0	12,4 +0,2/-0,1 mm

Table 1

The die sets diameters indicated in table 1 are those specified for the crimping machine as used by Transfer Oil to produce GOMAX QUADRA hose assemblies. If the indicated die sets are not available for the customers selected crimping machine, before ordering the selected crimping machine, please contact Transfer Oil Customer Service.

The use of inadequate dies sets, for example too small, will result in irregular shape and ridges on the external surface of the ferrule and the assembly will not be able to sustain the pressure.

The use of a die set too big will cause the incapability of reaching the final crimping diameter of the ferrule.

If among the dies available for your machine you are missing the suitable one, please don't attempt to crimp the fitting regardless, contact your assembling machine dealer to supply the missing die set.

File name: TS.ENG.002.UK Transfer Oil QUADRA Assembling Instructions.docx Document Ref: MDTECH001

TRANSFER OIL Pure Fluid Attitude



Transfer Oil S.p.A. via sacca, 64 - 43052 - colorno - parma - italy T +39 0521 3139 info@transferoil.com | www.transferoil.com

5. Preparing the assembly

Cut the GOMAX QUADRA capillary hose to the required length using Transfer Oil cutter for capillary hoses type WXA004. If you wish to cut in other ways, it is important that the cutting plane is normal to the hose axis (90° angle with a tolerance of 5%)



We recommended the use of the cutter WXA004.

6. Assembling the ferrule and the insert

Slip the nut over the hose (depending on fitting type). Ensure that the threaded side is pointing towards the end of the hose that needs assembling.

Slip the ferrule over the hose end, ensuring the correct positioning, in line with the hose end (the design allows only one possible setup).



Push the insert into the hose end you want to assemble.



File name: TS.ENG.002.UK Transfer Oil QUADRA Assembling Instructions.docx Document Ref: MDTECH001



Transfer Oil S.p.A. via sacca, 64 - 43052 - colorno - parma - italy T +39 0521 3139 info@transferoil.com | www.transferoil.com

7. Crimping of the ferrules

Make sure that the insert is completely inserted into the hose by positioning it in line with the end of the hose. Pay attention not to move the components already fitted and slide the ferrule over the hose towards the insert positioning in line with the insert.

G O M A X



Slide the Ferrule over the hose towards the insert positioning.

After having adequately set the crimping machine parameters, start crimping the ferrule making sure that the whole length is being crimped by the dies

7.1. Setting the crimping machine:

Depending on the crimping machine that is used, referring to the User Manual provided by the manufacturer of the crimping machine, set it correctly in order to achieve the final crimping diameter of the ferrules.

Refer to table 1 of this procedure to select the correct set of dies and the correct crimping diameter.

7.2. Crimping:

Assembling GOMAX QUADRA hoses requires crimping the hose in one step. This is to allow a uniform deformation of the ferrule.

After having adequately set the crimping machine parameters in accord to section (4) and the machine producer instructions, start crimping the ferrule making sure that the whole length is being crimped by the dies.

Take particular care that, during the crimping stroke of the machine the components of the assembly don't move into an incorrect position.

Let the machine reach the final position that you have previously set using the machine control device and only when you are sure that the machine has completed the crimping stroke, open the dies and remove the assembled end of the hose.





7.3. Verify the assembly

The parts are design so that an uncrimped assembly will not allow the nut to slide back up against the insert backing:

G O M A X





With a correct crimping the nut will cover the insert entirely reaching is correct screwing position:





To have verification of correct crimping, carry out a check with a vernier calliper.

- Measure and compare the diameters of the second and third rings of the swaged ferrule with the values and tolerances in table 1 at page 3.
- During this measurement rotate the hose end so that you can verify if the machine is making a proper round crimping.

If the crimping diameter is not within the range of tolerance for that particular hose type, cut the hose end and repeat the crimping operation.



Measurement of the third ring of the ferrule



Measurement of the second ring of the ferrule

A tutorial of the process can be found at: <u>https://www.youtube.com/watch?v=zQ7nxLLlu8E</u>.